

Product data sheet



Information


| | |
|-------------|---|
| Designation | ARSIS 135° angled grab bar, Anthracite grey Epoxy-coated Aluminium, 3 fixing points |
| Reference | 049735 |



Product advantages

- + Elliptic tube for an improved grip.
- + Possible to fit it "to the right" or "to the left".
- + Elegant and design shape.
- + Corrosion resistant warranty.

Description

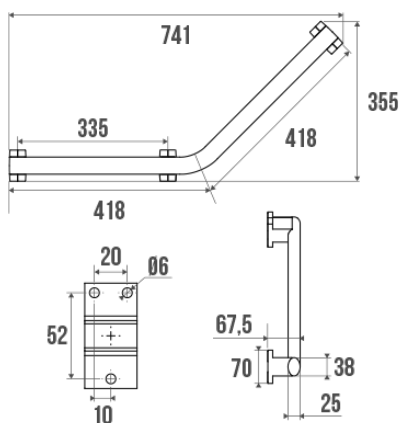

3 fixing points. 400 x 400 mm symmetric grab bar.
Elliptical tube in anthracite grey epoxy-coated aluminium, 38 x 25 mm.
Anthracite grey epoxy-coated resin flanges and cover plates.
3rd point to be fitted for right or left version.
Screws included.
Anticorrosion warranty.
Design coordinated with all ARSIS Comfort items.
Perfectly suitable for use in the hospitality industry.

Technical characteristics

| | |
|------------------------|---|
| Finish | Epoxy-coated |
| Color | Anthracite grey |
| Dimensions | 400 x 400 mm |
| Diameter Ø | 38 x 25 mm |
| Material | Aluminum |
| Gross weight | 0.860 kg |
| Packaging | Plastic protection bag + Hanger for display |
| CE Marking : safe load | 150 kg |

| | |
|------------------|--|
| Laboratory tests | 225 kg |
| Made in France | yes |
| Maintenance | yes |
| Guarantee | 10 years |
| Net weight | 0.800 kg |
| Gencod | 3563390497357 |
| Custom code | 7615200000 |
| Technical sheet | A04903502_IND_06 |
| Spare parts | Réf. 049007 : Support de fixation alu chromé |

Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 07/05/2024