

Product data sheet



Information


Designation	ARSIS Two-wall corner grab bar, White Epoxy-coated Aluminium, mat chrome-plated flanges
Reference	049930



Product advantages

- + Make stepping into or out of the shower easier.
- + Elliptic tube for an improved grip.
- + Possible to fit it "to the right" or "to the left".
- + Concealed fixings.

Description

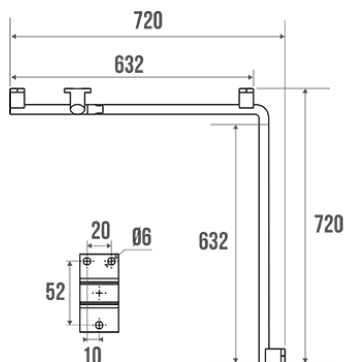

Elliptical tube in white epoxy-coated aluminium, 38 x 25 mm.
90° angled.
Mat chrome-plated resin cover plates.
3 fixing points. 3rd point to be fitted for right or left version.
Concealed fixing.
Screws included.
Anticorrosion warranty.
Design coordinated with all ARSIS bathroom accessories.
Perfectly suitable for use in the hospitality industry.
Also available with mat white epoxy-coated coverplates, ref. 049830.

Technical characteristics

Finish	Epoxy-coated
Color	Mat chrome-plated & white
Dimensions	632 x 632 mm
Diameter Ø	38 x 25 mm
Material	Aluminum
Gross weight	1.730 kg
Packaging	Cardboard box
CE Marking : safe load	150 kg
Laboratory tests	225 kg

Made in France	yes
Maintenance	yes
Guarantee	10 years
Gencod	3563390499306
Custom code	7615200000
Technical sheet	A04983001_IND_03
Spare parts	Réf. 049007 : Support de fixation alu chromé, Réf. 049009 : Cache-fixation gris chromé mat

Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 07/05/2024