

Product data sheet




Information

Designation	ARSIS Full Black T- or L-shaped shower bar, Black Matt Epoxy-coated Aluminium
Reference	049521

Product advantages

- + **Adjustable: convertible into a T or L shape, for all configurations.**
- + **Elliptic tube for an improved grip.**
- + **Help to get up and stand.**
- + **With slider bracket shower handset.**

Description

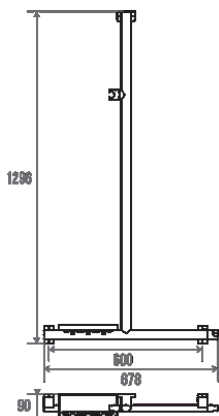

Elliptical tube in Black Matt - Full Black epoxy-coated aluminium, 38 x 25 mm.
Anthracite grey epoxy-coated resin flanges and cover plates.
Adjustable: convertible into a T- or L-shape at assembly stage. Once mounted, the positioning remains fixed.
Concealed fixings.
Screws included.
Anticorrosion warranty.
Design coordinated with all ARSIS Comfort items.
Perfectly suitable for use in the hospitality industry.

Technical characteristics

Finish	Epoxy-coated
Color	Mat black
Dimensions	1296 x 637 mm
Diameter Ø	38 x 25 mm
Material	Aluminum
Gross weight	2.020 kg
Packaging	Cardboard box + Label
CE Marking : safe load	150 kg
Laboratory tests	225 kg

Made in France	yes
Maintenance	yes
Guarantee	10 years
Net weight	1.500 kg
Gencod	3563390495216
Custom code	7615200000
Technical sheet	A04982007_IND_10
Spare parts	Réf. 049007 : Support de fixation alu chromé
Spécificité	Incompatible dans les milieux chlorés.

Fixing and maintenance advices

Hauteur de pose conseillée : 80 cm du sol. Les barres d'appui ajoutent de la sécurité à l'utilisateur si elles sont installées conformément aux instructions. Les efforts supportés par la fixation murale nécessitent une parfaite sélection de la visserie et des chevilles en fonction de la nature du support mural. Nous vous conseillons de choisir des vis en inox pour éviter tout risque de corrosion en milieu humide ($\varnothing$ 4 mm). Avant de percer la cloison, présenter physiquement le produit contre le mur puis marquer les emplacements de perçage. Tous les points de fixation doivent être impérativement respectés. Après montage et avant utilisation, s'assurer que les vis de fixation sont bien serrées. Ne pas utiliser la barre d'appui comme une marche pour atteindre quelque chose, ne pas s'asseoir dessus ou se suspendre.

Fiche produit mise à jour le : 07/05/2024