

Product data sheet




Information

Designation	ARSIS T- or L-shaped shower bar, White Epoxy-coated Aluminium
Reference	049820

Product advantages

- + **Adjustable: convertible into a T or L shape, for all configurations.**
- + **Elliptic tube for an improved grip.**
- + **Help to get up and stand.**
- + **With 2 brackets for shower handset : sliding and fixed rotating.**

Description

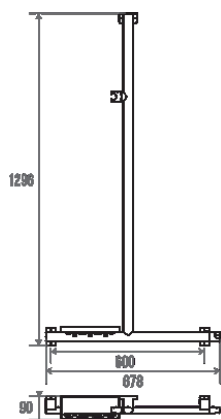

Adjustable: convertible into T or L shape at assembly stage. Once assembled, the positioning remains fixed: 3 fixing points.
With shower rail slider bracket: 1 slider bracket on the vertical bar to ease the catch in hand of the shower handset. 1 fixed and rotating bracket on the horizontal bar to enable people while sitting to have a shower without any difficulty.

Elliptical tube in white epoxy-coated aluminium.
White resin cover plates.

Wall fixings included.
Design coordinated with all ARSIS Comfort items.
Perfectly suitable for use in the hospitality industry.

Technical characteristics

Finish	Epoxy-coated
Color	White
Dimensions	1296 x 637 mm
Diameter Ø	38 x 25 mm
Material	Aluminum
Gross weight	2.020 kg
Packaging	Cardboard box + label
CE Marking : safe load	150 kg
Laboratory tests	225 kg

Made in France	yes
Maintenance	yes
Guarantee	10 years
Net weight	1.500 kg
Gencod	3563390498200
Custom code	7615200000
Technical sheet	A04982007_IND_10
Spare parts	Réf. 049007 : Support de fixation alu chromé, Réf. 049008 : Cache-fixation blanc

Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 07/05/2024