

## Product data sheet




### Information

Designation	ARSIS T-or L-shaped shower bar, White Epoxy-coated Aluminium, mat chrome-plated flanges
Reference	049920

### Product advantages

- + **Adjustable: convertible into a T or L shape, for all configurations.**
- + **Elliptic tube for an improved grip.**
- + **Help to get up and stand.**
- + **With 2 brackets for shower handset : sliding and fixed rotating.**

### Description

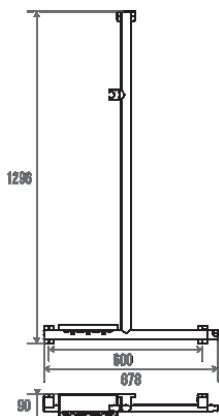

Adjustable: convertible into T or L shape at assembly stage. Once assembled, the positioning remains fixed: 3 fixing points.  
With shower rail slider bracket: 1 slider bracket on the vertical bar to ease the catch in hand of the shower handset. 1 fixed and rotating bracket on the horizontal bar to enable people while sitting to have a shower without any difficulty.  
Elliptical tube in white epoxy-coated aluminium.  
Mat chrome-plated resin cover plates.

Wall fixings included.  
Design coordinated with all ARSIS Comfort items.  
Perfectly suitable for use in the hospitality industry.

### Technical characteristics

Finish	Epoxy-coated
Color	Mat chrome-plated & white
Dimensions	1296 x 637 mm
Diameter Ø	38 x 25 mm
Material	Aluminum
Gross weight	2.020 kg
Packaging	Cardboard box + label
CE Marking : safe load	150 kg
Laboratory tests	225 kg

Made in France	yes
Maintenance	yes
Guarantee	10 years
Net weight	1.500 kg
Gencod	3563390499207
Custom code	7615200000
Technical sheet	<a href="#">A04982007_IND_10</a>
Spare parts	Réf. 049007 : Support de fixation alu chromé, Réf. 049009 : Cache-fixation gris chromé mat

## Fixing and maintenance advices

---

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws ( $\varnothing$  4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. **DO NOT** use the grab bar as a step. **DO NOT** sit on or hang from the grab bar.

Fiche produit mise à jour le : 07/05/2024